

Instructions For Use

S4S™ Safety Carton Cutter

Blade-less tape splitter: cuts tape without exposed blade. Use with retracted (closed) blade only.

Spare blade
Compartment
access

Blade exposure
safety window

Blade release
lever releases
the blade carriage
button for
changing blades

2 Tray cut
positions


Ergonomic
design for
small and
large
hands

3 Top cut
positions
(Box)


Blade
change




Blade Change
Using the S4™ single-
notch blade (SPO-17)

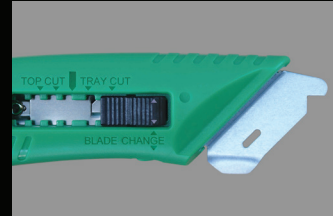

On back of knife-move black blade depth adjuster switch to "blade change".

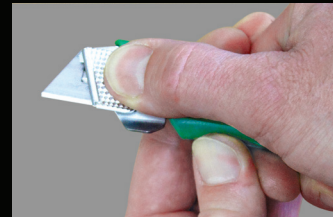

Press blade release lever and push blade carriage button forward.

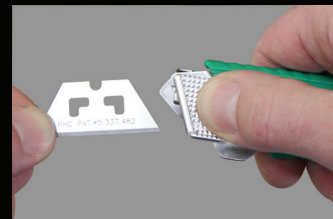

Lift blade off alignment tab. Reload using alignment tab to position blade.


Features & Functions



Tape Cut



Top Cut

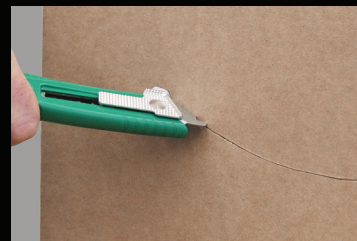

Tray Cut / Window Cut



To Remove blades from blade storage compartment press from behind with index finger and slide blades forward and out with thumb.



S4SL Left-handed
Safety Cutter



S4SR Right-handed
Safety Cutter



For Information Call: (800) 229-2233
Email: info@phcsafety.com
www.phcsafety.com



PHC
PACIFIC HANDY CUTTER[®]

Working Safe Everyday.[®]

UKH-423 Safety Holster
CL-36 - Coiled Lanyard Available