



What tire size number do I need?


- Check the sidewall of your existing tire for the tire size number

What bearing/bushing size do I need?

- Measure the inside diameter of the bearing or bushing on your existing wheel or the outside diameter of the axle it will be mounted on

What hub length do I need?

- Measure the distance from the outside of one bearing/bushing to the outside of the other on your existing wheel
- **Tip:** if your tape measure is too wide to fit through the bearing/bushing – place a pen or pencil through the bearing/bushing and then measure that length

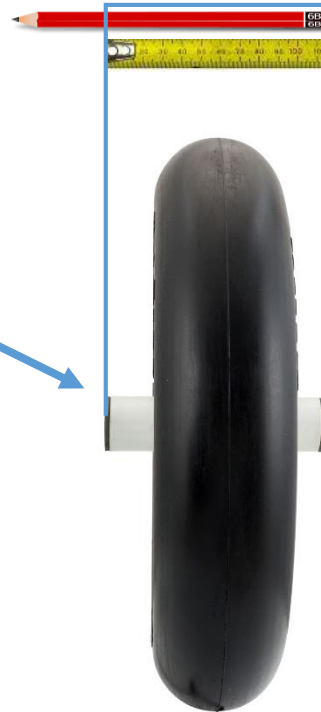

Do I need a centered or offset hub?

- Centered (symmetrical) = both sides of the hub on your existing wheel stick out the same distance and you can mount or install it either way
- Offset = one side of the hub on your existing wheels sticks out farther than the other and this impacts how you mount or install it

Centered

Offset

