

Quick Links

[Resource Library](#)
[Safety Data Sheets \(SDS\)](#)
[Video Library](#)

Some of these links lead to web-based resources that are not product-specific.



Product Description

The Scotch-Brite™ Low Scratch Scour Pad 2000HEX is a powerful 2-in-1 scouring pad. It features a raised power dot side that is engineered to scour away tough messes like a medium duty pad with less visible scratching. The reverse dark side removes fine food soil to give a virtually spotless finish. It can be used for everyday cleaning of most cooking utensils and equipment.

Special Features

Power Dot Technology

- Raised low scratch power dot side is engineered to quickly and effectively cut through stubborn baked-on or burnt-on food.
- Low scratch mineral within the dots is designed to minimize scratching on sensitive surfaces like stainless steel.
- Power dot side is engineered for quicker rinsing and minimizing food particles from getting trapped in the web.

2-in-1 Cleaning Tool

- Dual purpose: only one scour pad needed for multiple jobs.
- Power dot side combines high quality resin and low scratch minerals to provide medium duty cleaning performance.
- Dark blue side is designed to scour away fine particles and grease, leaving no residue, for a clean finish.

Hexagon Shape

- Designed to fit comfortably in your hand; does not need to be cut down.
- Extra corners help clean hard-to-reach areas.

Applications

Test on an inconspicuous area prior to first use.

General purpose cleaning uses include:

- Pots and pans
- Cooking appliances and utensils
- Kitchen and maintenance equipment
- Delicate cooking surfaces like stainless steel
- Fixtures such as water fountains and tubs
- Countertops and tile

Product Specifications

- Shape: Hexagon
- Dimensions: length 5.75 in, 146 mm (corner to corner); width 5.0 in, 127 mm (side to side)
- Color: blue power dot side and dark blue scour pad side
- Composition: power dot and scour pad sides—synthetic fibers, abrasive particles, and resin

General Use Directions

The scour pad can be used wet or dry.

1. Hold scour pad with one hand. Both sides of the scour pad can be used to scour depending upon the application. For most cases, scour using a circular scrubbing motion.
2. For sticky, tough, and/or baked-on food, use the power dot side to cut through thick layers and dislodge large particles. Flip the scour pad over and use the blue scour side to remove fine food particles and grease.
3. Once the food and grease have been removed from the surface being cleaned, rinse or wipe off the surface with a clean, damp cloth.

Scotch-Brite™ Low Scratch Scour Pad 2000HEX

Scour Pad Cleaning Directions

Proper cleaning of the Scotch-Brite™ Low Scratch Scour Pad 2000HEX will help extend its life. Once the scour pad loses abrasive power (dots start to wear down or the dark blue side begins to lose its dark color), discard in the regular kitchen trash.

Scour pads can be rinsed with warm or hot water or soaked in a cleaning solution to dissolve caked-on soil and grease.

Scour Pad Cleaning by Hand

- Spray or rinse off excess food debris from the scour pad using a dish sprayer or sink faucet.
- Wash the scour pad in soapy water to remove any remaining food debris and grease.
- Rinse the scour pad with clean water, making sure no food debris is left on the scour pad. Squeeze excess water from the scour pad and allow to air dry.

If desired, soak the scour pad in sanitizer solution. After soaking, squeeze excess solution from the scour pad, rinse and allow to air dry.

Scour Pad Cleaning by Dishwasher

- Spray off or rinse excess food debris from the scour pad using a dish sprayer or sink faucet. Remove any remaining food debris by hand.
- Do not roll the scour pad, place it in a dishwasher and make sure both sides of the scour pad are exposed to washing.
- After washing, take the scour pad out of the dishwasher and allow to air dry.

Precautionary Summary

Power dot and scour pad sides:

- Use caution and test surfaces prone to scratching prior to extensive use.
- Not recommended for polished surfaces where minor scratching is undesirable.
- May damage or remove non-stick coatings.
- Test in an inconspicuous area prior to use.

Health and Safety

CAUTION

When handling any chemical products, read the manufacturers' container labels and the Safety Data Sheets (SDS) for important health, safety and environmental information. To obtain SDS sheets for 3M products go to 3M.com/SDS, or by mail or in case of an emergency, call 1-888-364-3577 or 1-651-737-6501. When using any equipment, always follow the manufacturers' instructions for safe operation.

Technical Information

Technical information and data, recommendations, and other statements provided by 3M are based on information, tests, or experience which 3M believes to be reliable, but the accuracy or completeness of such information is not guaranteed. Such technical information and data are intended for persons with knowledge and technical skills sufficient to assess and apply their own informed judgment to the information. The typical values shown should not be used for the purpose of specification limits. If you have questions about this Product, contact the **Customer Service Department at 1-800-852-9722**.

Product Use

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. Given the variety of factors that can affect the use and performance of a 3M product, user is solely responsible for evaluating the 3M product and determining whether it is fit for a particular purpose and suitable for user's method of application.

Warranty

3M warrants that each 3M product will be free from defects in material and manufacture for 90 days from the date of purchase from 3M's authorized distributor. 3M MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limited Remedy

If a 3M product does not conform to this warranty, the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

No Extension of Warranty

In the case of an approved warranty claim, the replacement Product will carry only the remaining term of the original warranty period.

Limitation of Liability

Except where prohibited by law, 3M will not be liable for any loss or damage arising from the 3M product, whether direct, indirect, special, incidental or consequential, regardless of the legal theory asserted.

Commercial Solutions Division

3M Center, Building 220-12E-04
St. Paul, MN 55144

1-800-698-4595
3M.com/powerdots

3M, Scotch-Brite and the shape of the scouring pad are trademarks of 3M. Used under license in Canada.
Please recycle. Printed in the USA.
© 3M 2018. All rights reserved. 78-8134-0786-9 May 2018

