

Instructions For Use

S4[®] Safety Carton Cutter



Now personalize your cutter using the **User ID box** on back of cutter

Spare blade **Compartment access**

Spare blade **Compartment**

Blade-less tape splitter: cuts tape without exposed blade. Use with retracted (closed) blade only.

2 tray cut positions

Blade exposure safety window

Blade release lever releases the blade carriage button for changing blades

Top cut (Box)

Ergonomic design for small and large hands


UKH-423 Safety Holster
CL-36 -Coiled Lanyard Available



Blade Change
Using the S4[®] single-notch blade (SPO-17)



Press blade release lever and push blade carriage button forward.

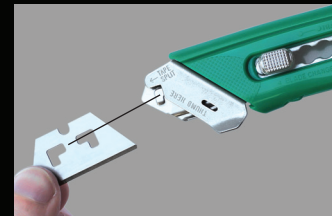

Lift blade off alignment tab. Reload using alignment tab to position blade.



To Remove blades from blade storage compartment press from behind with index finger and slide blades forward and out with thumb.


Features & Functions



Tape Cut



Top Cut

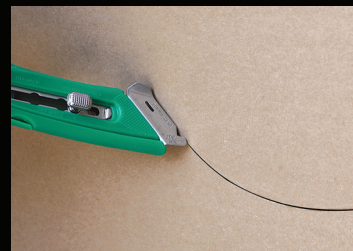

Tray Cut / Window Cut



S4L - Left-handed Safety Cutter



S4R - Right-handed Safety Cutter

For Information Call: (800) 229-2233
Email: info@phcsafety.com
www.phcsafety.com



PHC
PACIFIC HANDY CUTTER[®]

Working Safe Everyday.[®]