

OPERATION – INSTALLATION MANUAL



Quality Since 1917



Fostoria Division of:



TPI Corporation
P.O. Box 4973
Johnson City, TN 37602

INFRARED HEATER

MODEL NO.:

PCH-48C

WARNING! DO NOT ATTEMPT TO INSTALL, OPERATE, OR SERVICE THIS PRODUCT BEFORE READING ALL INSTRUCTIONS CAREFULLY. FAILURE TO COMPLY WITH THESE INSTRUCTIONS COULD RESULT IN FIRE, PERSONAL INJURY AND/OR PROPERTY DAMAGE! RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

DESCRIPTION

The PCH-48C Heaters are designed to provide efficient spot heating for construction sites, farms, warehouses, garages, truck docks, paint and plaster drying, etc. **NOT FOR INDOOR RESIDENTIAL USE.** Heaters are equipped with steel grid type protective guards. A toggle switch is supplied for turning the heater on and off. A tip-over switch is also supplied to de-energize the element should the heater be turned over.

SPECIFICATIONS

MODEL No. **PCH-48C**

Heat source..... 5/8" Dia. Quartz Tube

Element Life (Avg.)..... 5000 Hrs.

Wire Guard..... 0.125" Dia. Steel Wire

Housing..... 20 gauge Powder Coated Steel

Powercord..... 15', 14/3 Grounded Type w/ Nema 5-20P Plug

120V

Element Wattage..... 1500

IMPORTANT SAFETY INFORMATION

Read all instructions before using this heater.

1. Make certain that the power source conforms to the electrical requirements of the heater
2. Unplug power cord before installing or servicing.

WARNING: DO NOT DEPEND UPON A THERMOSTAT OR OTHER SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER WHEN INSTALLING OR SERVICING THE HEATER. ALWAYS UNPLUG THE HEATER. FAILURE TO DO SO COULD RESULT IN FATAL ELECTRIC SHOCK.

3. **NEVER** leave the heater unattended for extended periods, while it is in operation.
4. Power cord is equipped with a three-wire bonding (grounding) type plug that must be inserted into a matching receptacle. Under no circumstances should the bonding prong be cut off plug. Where a two-prong wall receptacle is encountered, it must be replaced with a properly bonded (grounded) three-prong receptacle installed in accordance with the National Electric Code (NEC) and all applicable local codes and ordinances. This work must be done only by a qualified electrician, using copper wire only.

WARNING: USE OF A THREE-PRONG TO TWO-PRONG ADAPTER IS NOT RECOMMENDED. Improper connection may create the risk of electrocution. Use of such adapters is not permitted in Canada.

5. All wiring should be performed by a qualified electrician.
6. This heater can be used for 120V, single phase power. These units are supplied with 3-wire cordsets for portability. **To reduce the risk of electric shock, the heater must be securely and adequately bonded (grounded)!** This can be accomplished by either: 1) Inserting the plug directly into a properly installed and bonded 3-prong bonding type receptacle. 2) Using a separate bonding wire connected to the bare metal of the heater. 3) Using other suitable means. The green (or green and yellow) conductor in the cord is the bonding (grounding) wire.

WARNING: Never connect the green (or green and yellow) wire to a live terminal!

7. Where possible, avoid the use of extension cords. If they must be used, minimize the risk of overheating by ensuring that they are Listed and are of the proper gauge and length, and that they have 3-prong bonding (grounding) type plugs. Use 3-pole receptacles that accept the 3-prong plugs. Never use a single extension cord to operate more than one heater.
8. Do not insert fingers or foreign objects into the heater. Do not block or tamper with the heater while it is in operation. Do not touch heater while it is in operation or just after it has been turned off, as some parts may be hot enough to cause injury.

IMPORTANT SAFETY (continued)

9. This heater is intended for general heating applications ONLY. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres.
10. Be sure all electrical parts are enclosed to prevent personal injury.
11. CAUTION: Check branch voltage. Heaters should be operated at voltages no higher than the heating elements and the heater are designed for. (Lower voltages, however, pose no problem other than a loss of wattage).
12. This heater is NOT waterproof and is not intended to be used in saunas, showers, or in potentially wet locations.

ASSEMBLY

CAUTION: DISCONNECT POWER BEFORE INSTALLING OR REPLACING QUARTZ TUBES. THESE TUBES CAN AND SHOULD BE INSTALLED PRIOR TO MOUNTING HEATER. These heaters should always be mounted so that the quartz tubes are horizontal, or tube burnout will occur.

Be sure that the power source conforms to the heater requirements.
Make sure the quartz tube conforms to your power source requirements.

INSTALLATION OF HEATING ELEMENTS:

The heater is equipped with two hi-temperature 14 gauge silicone lead wires and a ground termination. Make sure power source conforms to the heater requirements. Use only Fostoria quartz tubes.

1. Remove the sheet metal screws that hold fixture end caps and lamp guard in place.
2. Insert quartz tube in the "L"-shaped slots in heater housing.
3. On each end of the quartz tube, place (1) lead wire ring terminal, (1) split washer and (1) hex nut on the threaded stud and **tighten securely** (see image below). Split washers and hex nuts are provided in hardware package.
4. Replace one end cap and insert one end of lamp guard, place opposite end of lamp guard into the remaining end cap and secure with screws.

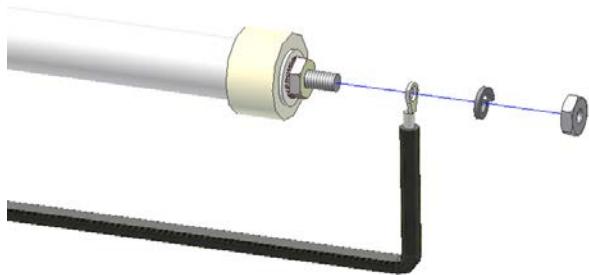


Figure 1

OPERATING INSTRUCTIONS

1. Plug heater into a bonded (grounded) receptacle with a power source conforming to the heater requirements. Ensure that total current does not exceed circuit rating.
2. Adjust heater height by sliding adjustment arm up or down the upright strut, tighten handle.
3. Adjust angle of heater to desired position and tighten handle.
4. To energize heater, flip the toggle switch on housing.


MAINTENANCE

WARNING: DISCONNECT HEATER FROM POWER SUPPLY BEFORE SERVICING OR INSPECTING FOR ANY REASON. FAILURE TO DO SO COULD RESULT IN ELECTRICAL SHOCK OR INJURY.

Quartz tubes and reflectors should be kept free from fingerprints, grease and foreign matter. Periodic washing will assure the most efficient heater operation. Periodically wipe reflectors and quartz tubes with a clean, soft cloth; also periodically wipe the tubes with alcohol and a clean, soft cloth. Be sure to allow tubes to fully cool down prior to cleaning or performing maintenance.

Replace or repair damaged or worn cords immediately.

STAND ASSEMBLY

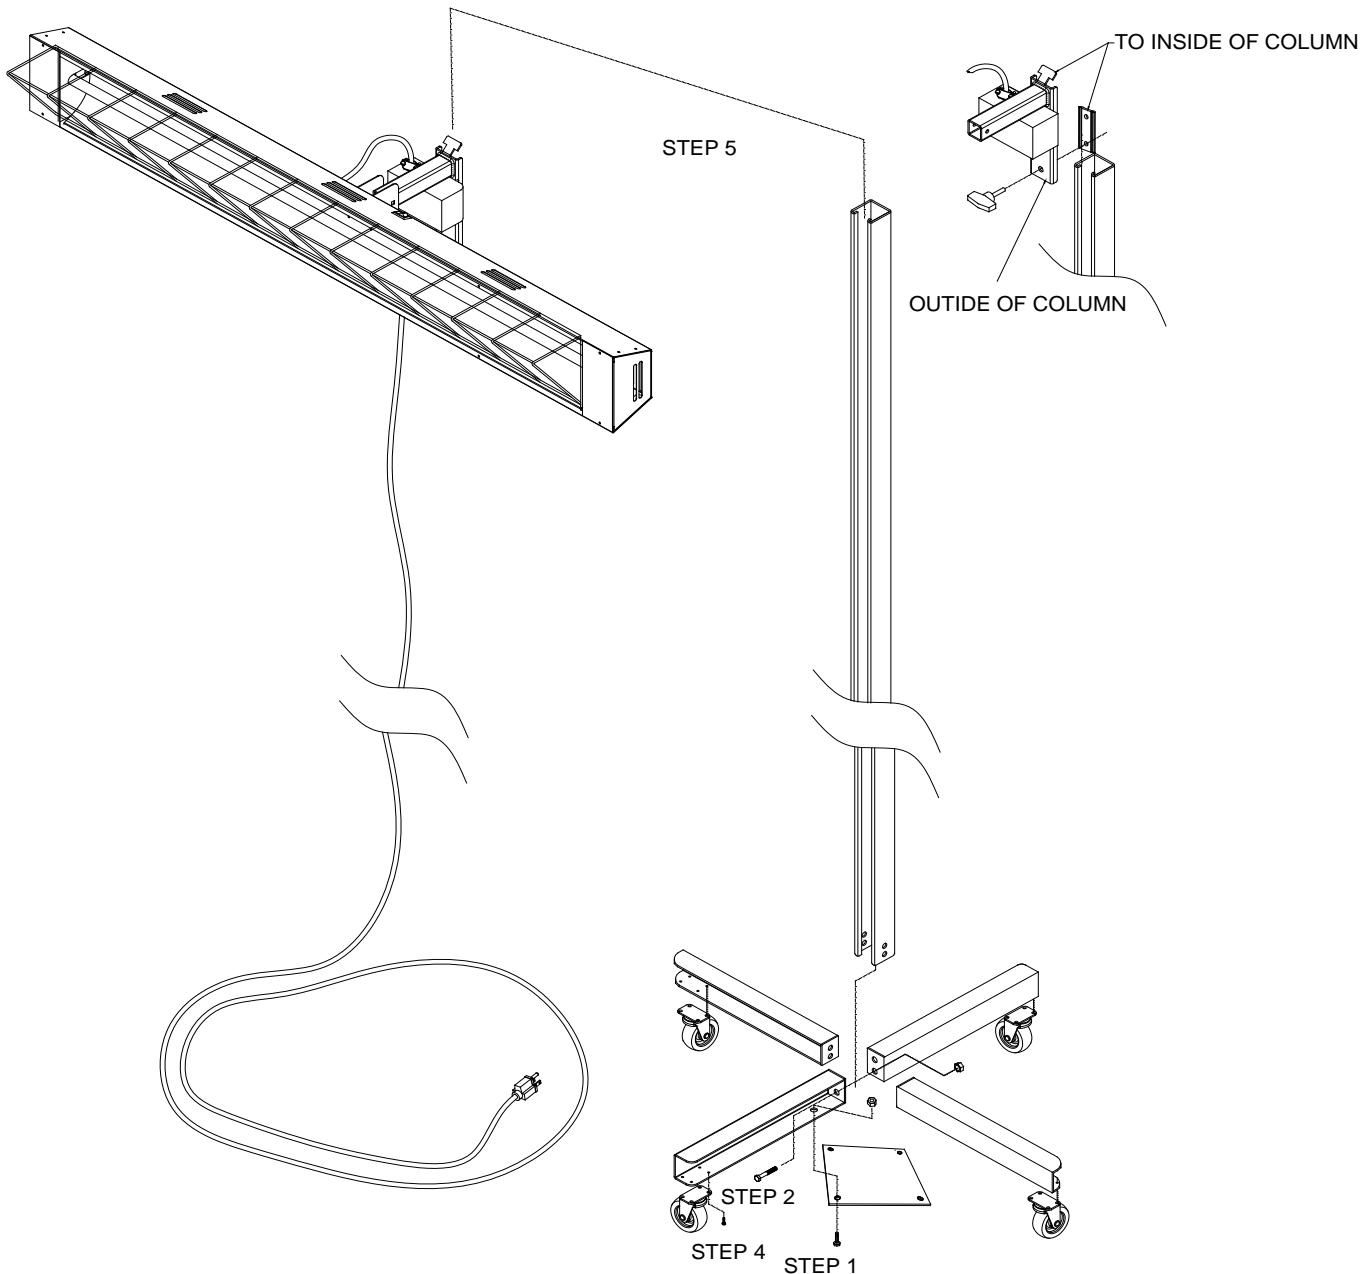

1. Mount the (4) legs to support plate. Do not completely tighten bolts at this time.
2. Place column inside of legs and secure with bolts. One bolt in bottom hole of opposing legs and one bolt in top of second set of opposing legs .
3. Tighten support plate bolts.
4. Secure castors as shown.
5. Assemble heater to column as shown.

REPLACEMENT ELEMENT

(Quartz Tube Series)

PART #	MODEL	Watts	Volts	Ph	BTU's	WT. (Lbs.)
58763001	Quartz tube, stud termination	1500	120	1	5120	3

LIMITED WARRANTY

Products manufactured by TPI Corporation are warranted to the original consumer to be free from defects in material and workmanship for twelve (12) months from the original purchase date.

The TPI limited warranty does not cover products that have been modified outside of our factory, damage or failure caused by acts of God, abuse, misuse, connected to or placed on other than rated voltage, abnormal usage, fault, installation, failure to follow suggested maintenance procedures enclosed with the product, improper maintenance or any repairs other than those provided by an authorized TPI service center.

There are no obligations or liabilities on the part of the Corporation for consequential damages arising out of or in connection with the use or performance of the product or other indirect damages with respect to loss of property, revenues, profit, costs of removal installation, or reinstallation.

All implied warranties with respect to TPI products, including implied warranties for merchantability and implied warranties for fitness, are limited in duration to twelve (12) months from original date of purchase, except those products or parts of products which are warranted for long periods thereon.

Some states do not allow the exclusions or limitation of incidental or consequential damages and some states do not allow limitations on how long an implied warranty lasts. The above exclusions or limitations may not apply to you.

During the warranty period, TPI Corporation will, at its sole option, repair or replace any defective parts or products returned, freight prepaid, to the TPI Corporation factory or such other locations as TPI Corporation may designate. Returned products must be packaged carefully and TPI Corporation shall not be responsible for damage in transit.

When returning parts, the owner must provide the model number of the product and nature of difficulty being experienced. This warranty does not obligate TPI Corporation to bear the cost of labor in replacing any assembly, unit or component part thereof, nor does the company assume any liability for secondary charges, expenses for installing or removal, freight or damages. There will be charges rendered for product repairs made after the warranty period has expired. Proof of purchase, including date, must accompany request for in-warranty service. In any event, TPI Corporation's maximum liability shall not in any case exceed the list price for the product claimed to be defective. This warranty gives to you specific legal rights and you may have other rights, which may vary from state to state. For the name of your nearest authorized TPI Corporation service center, please write to TPI Corporation, P.O. Box 4973, Johnson City, TN 37602.

HEATING PRODUCTS WARRANTY COVERAGE	
All Heating Products Thermostats and Controls	1 Year 2 Years