
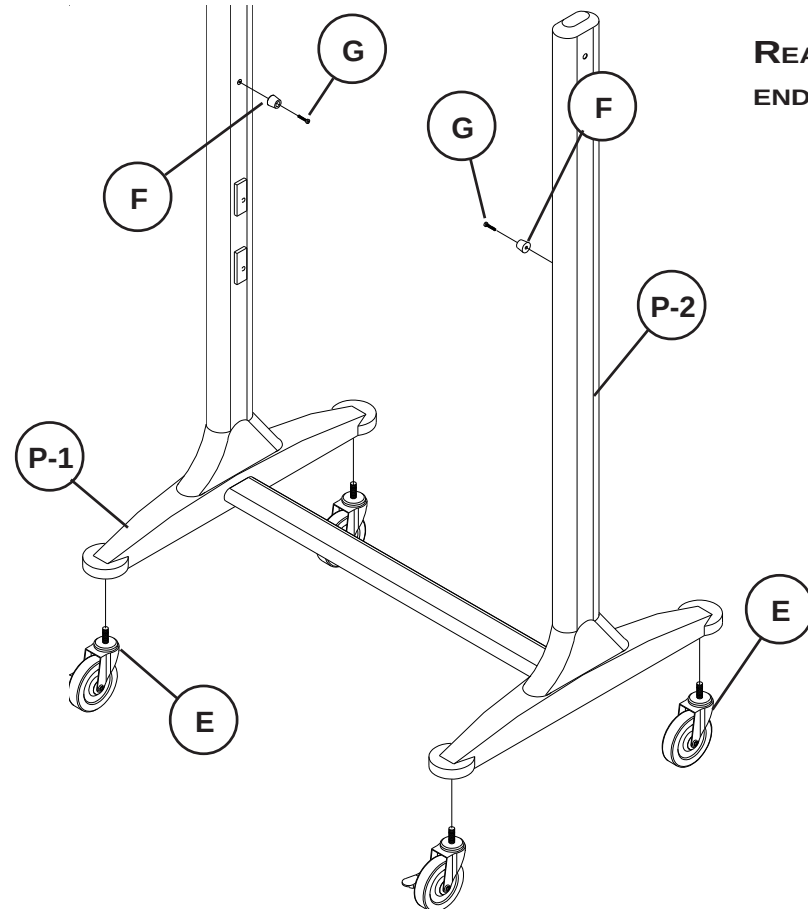


1 Attach Cross Brace (P-4) to Legs (P-1) and (P-2).

2. Attach 4 Locking Casters (E). Assemble Rubber Bumper (F).

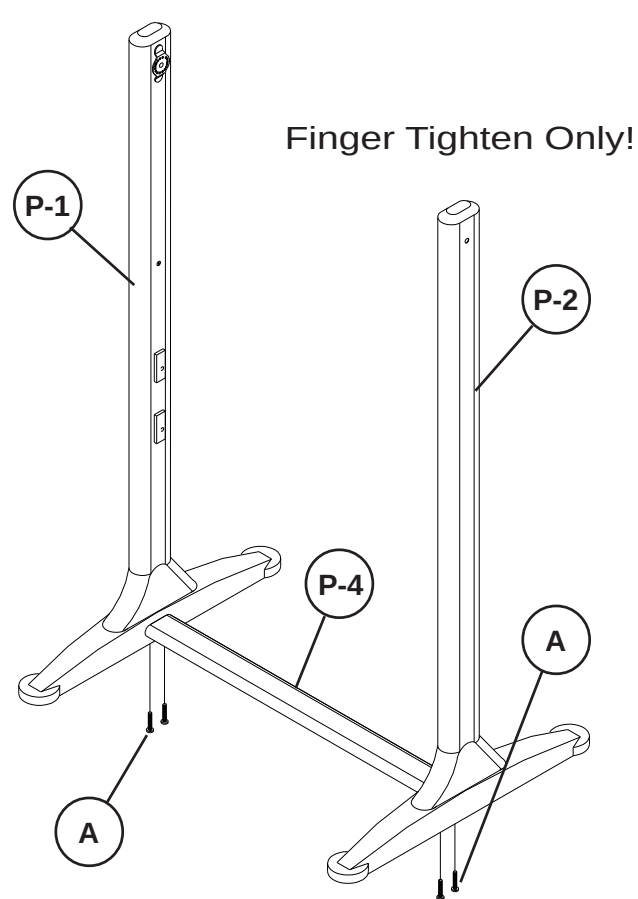

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END **BEFORE** STARTING TO ASSEMBLE UNIT.

Missing Parts or UPS Damaged Parts
For Your Convenience you can
EMAIL us at
boards@bestrite.com
24HOURS 7 DAYS A WEEK


Tighten Casters using Caster Wrench (J).

Hardware List






A		Long Socket Screw	4 EA
B		Short Socket Screw	4 EA
C		Flange	2 EA
D		Knob	2 EA
E		4" Locking Caster	4 EA
F		Rubber Bumper	2 EA
G		1" Machine Screw	2 EA
H		Allen Wrench	1 EA
J		Caster Wrench	1 EA

3 Remove 2 Screws from each side of Framed Board (P5).

4 Attach 2 Flanges (C) to the Framed Board (P-5) using 4 Screws removed in Step #3.

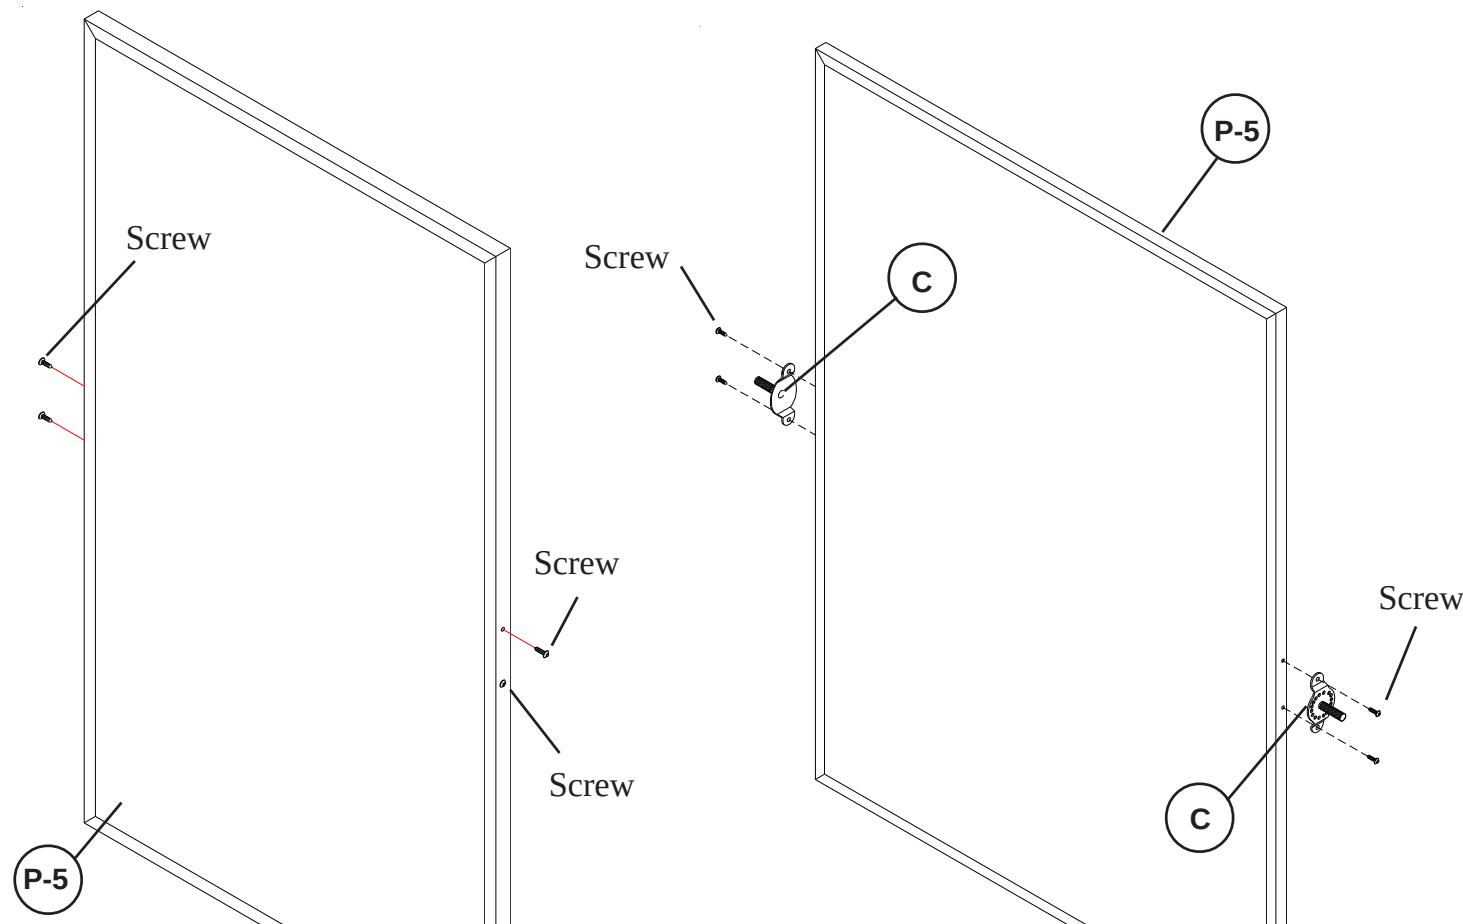


Parts List

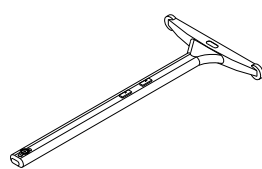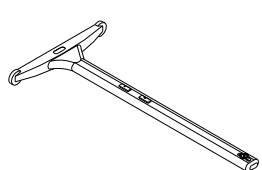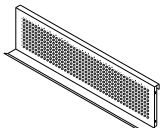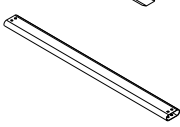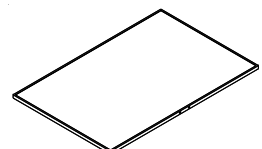P-1		Right Leg	1 EA
P-2		Left Leg	1 EA
P-3		Tray	1 EA
P-4		Cross Bar	1 EA
P-5		Framed Board	1 EA

BEST-RITE®
"It's A Better Board"



#669RU & #669 RG
Platinum Reversible

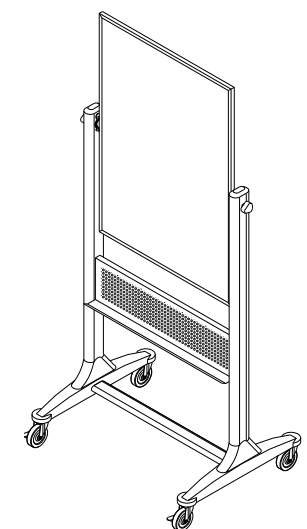

5 Insert Framed Board between legs, and attach Flanges (C) to the 2 Legs (P-1 & P-2) using 2 Knobs (D).

6 Assemble Tray (P-3) to Legs (P-1 & P-2).

7 Tighten All Screws using Allen Wrench (H).

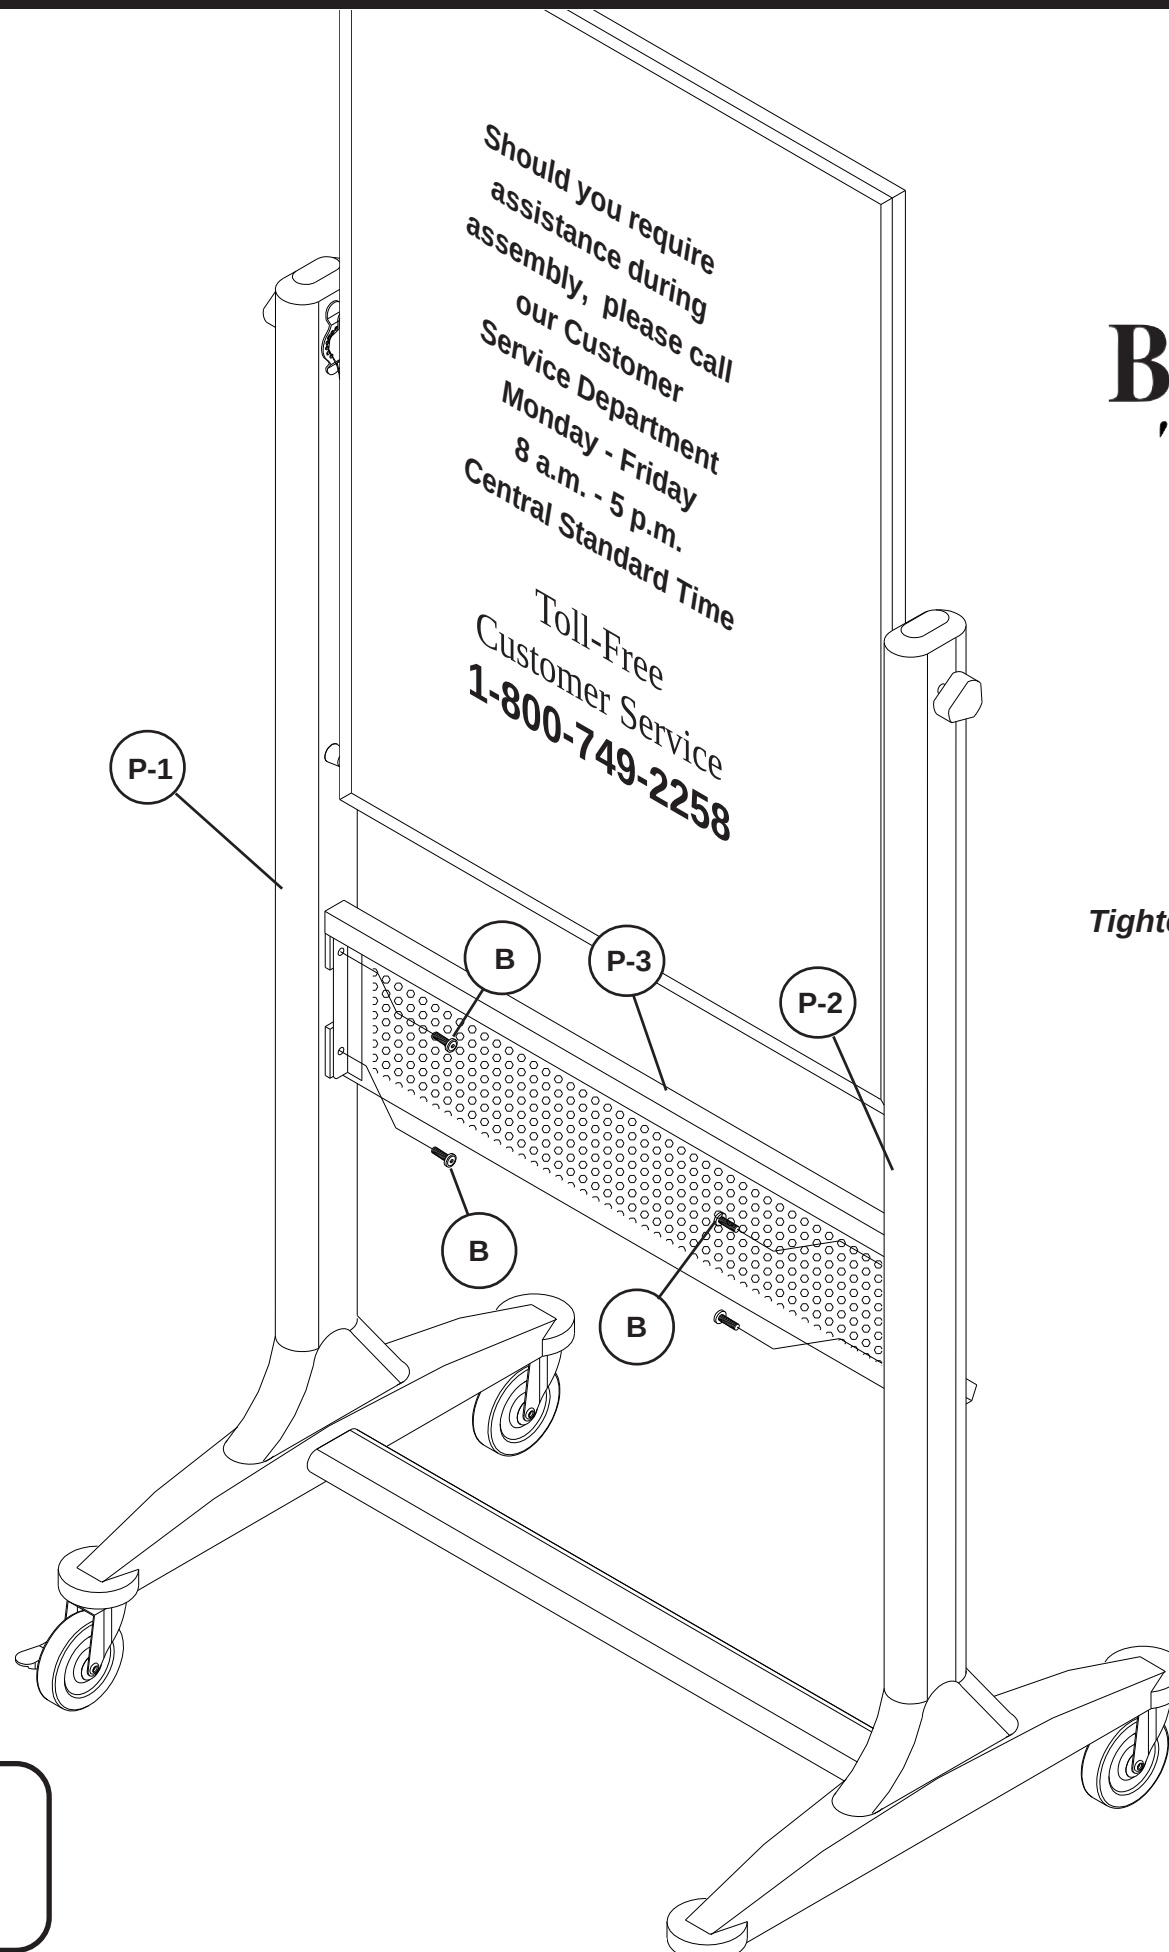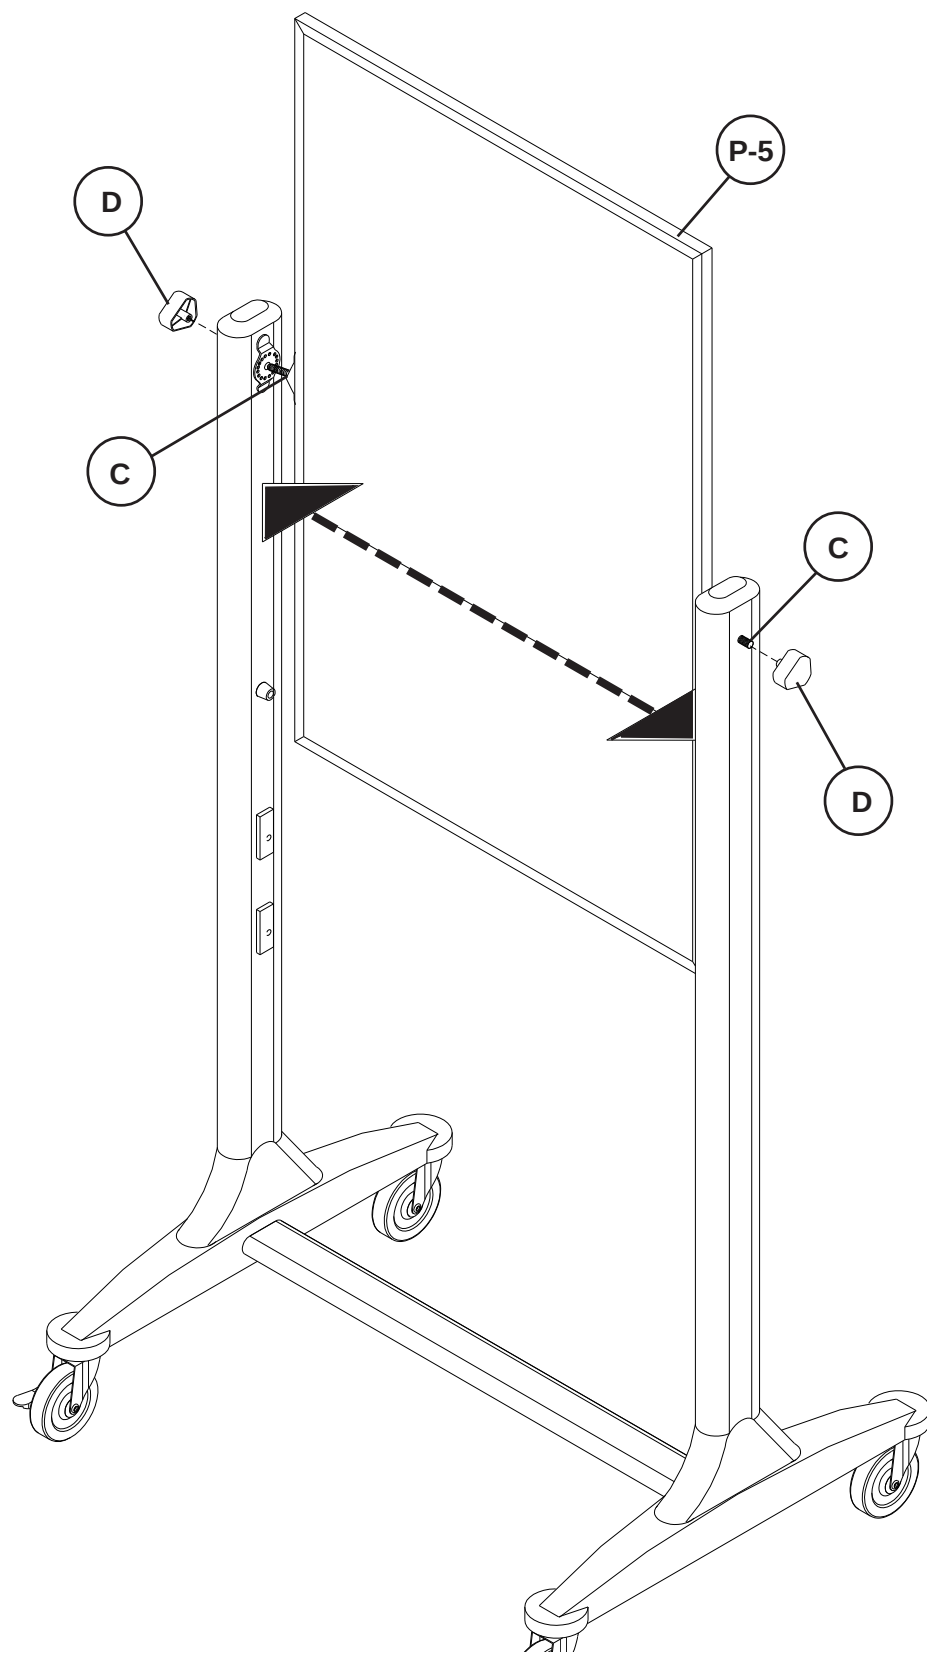

BEST-RITE®
"It's A Better Board"

Tighten screws using Allen Wrench (H).

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.