


ERG50 ERG120

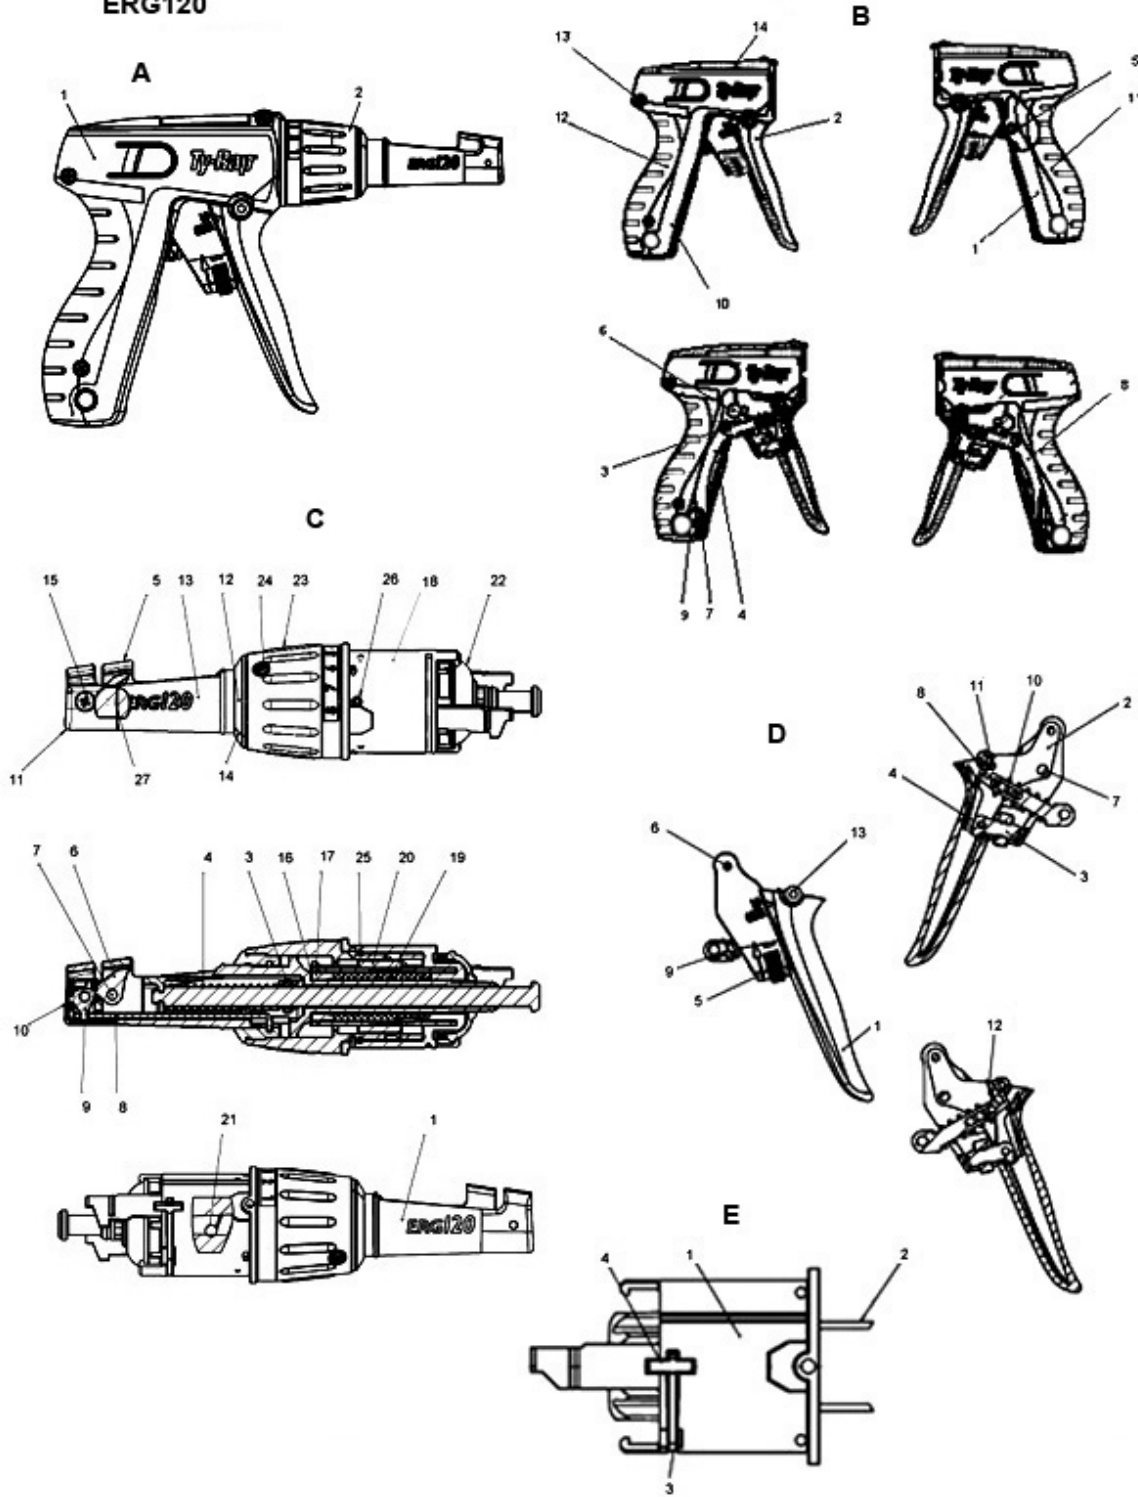

ERG50			
Component Number	Drawing Locator Number	Number Per Assembly	Description
CDS010403	A1	1	HANDLE ASSY
CDS010409		1	TRIGGER ASSY
CDS010431A	D1	1	TRIGGER
CDS010455	D2	1	SPRING HOLDER
CDS010434	D3	1	ADJUSTMENT ROD
CDS010463	D4	1	ADJUSTMENT PIN
CDS010450	D5	1	ADJUSTMENT WHEEL
CDS010436A	D6	1	PIN
CDS010480	D7	1	PUSH ROD PIN
CDS010457	D8	1	GUIDE PIN
CDS010456A	D9	1	PUSH ROD
CDS010478	D10	1	GEAR SPRING
CDS010465	D11	1	SHIFTER
CDS010466A	D12	1	THREAD
CDS010446	D13	2	KNOB
CDS010453G	B1	1	LEFT HOUSING
CDS010437B	B3	1	PUSH ROD PIN
CDS010433B	B4	1	LEFT LEVER
CDS010442	B5	2	TENSION RING
CDS010479	B6	1	GEAR WHEEL
CDS010435A	B7	1	LEVER PIN
CDS010432B	B8	1	RIGHT LEVER
CDS010430	B9	1	TRIGGER SPRING
CDS010451G	B10	1	RIGHT HOUSING
CDS010454	B11	1	LEFT GRIP
CDS010452	B12	1	RIGHT GRIP
CDS010443	B13	4	SCREW
TA03540	B14	1	LABEL
CDS010404	A2	1	TOOL HEAD

CDS010472D	C1	1	RIGHT CENTERPIPE
CDS010408A	C2	1	PULL ROD
CDS010467	C3	1	LOCK PLATE
CDS010460	C4	1	PULL ROD SPRING
CDS010438A	C5	1	SLEIGH
CDS010448D	C6	1	BACK STOP
CDS010444	C7	1	SLEIGH PIN
CDS010418	C8	1	BLADE ROD
CDS010447A	C9	1	LIFTER
CDS010461	C10	1	BLADE (ERG50B)
CDS010439D	C11	1	NOSE
CDS010474C	C12	1	LOWER PUSH RING
CDS010471D	C13	1	LEFT CENTERPIPE
CDS010473C	C14	1	UPPER PUSH RING
CDS010441	C15	1	NOSE SCREW
CDS010481	C16	1	SHIM WASHER
CDS010419A	C17	1	SPRING RELEASE
CDS010406	C18	1	HOUSING
CDS010425B	E1	1	MAIN HOUSING
CDS010492	E2	2	BLADE SPRING
CDS010459	E3	1	SNAP PIN
CDS010458A	E4	1	SNAP SPRING
CDS010477	C19	1	RELEASE SPRING
CDS010415	C20	1	FORCE RING
CDS010427	C21	2	FORCE RING PIN
CDS010476	C22	1	SNAP WHEEL
CDS010426C	C23	1	TENSION SLEEVE
CDS010491	C24	2	TENSION SLEEVE SCREW
CDS010428C	C25	2	LOCKING PIN
CDS010423	C26	1	SET SCREW
CDS010468B	C27	1	SPRING BACK STOP