




1 Locate and Drill holes for Z-Hangers.

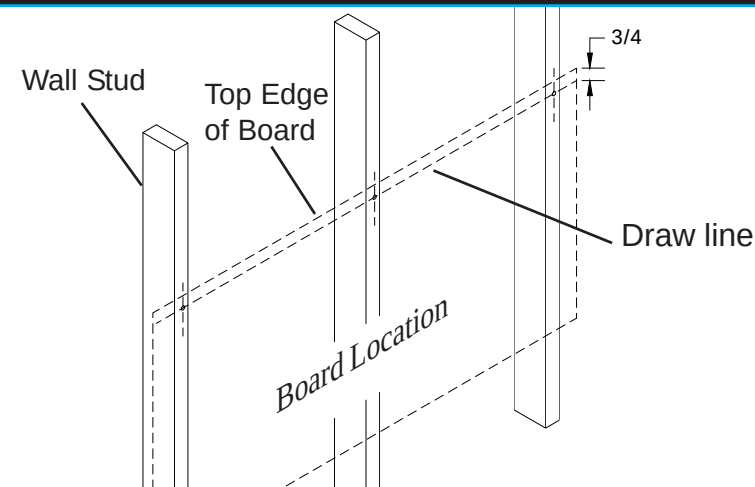


Determine board location. Measure from floor to the top edge of board. Mark with pencil line the corner location. Measure down from top edge of board 3/4", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/16" drill bit.

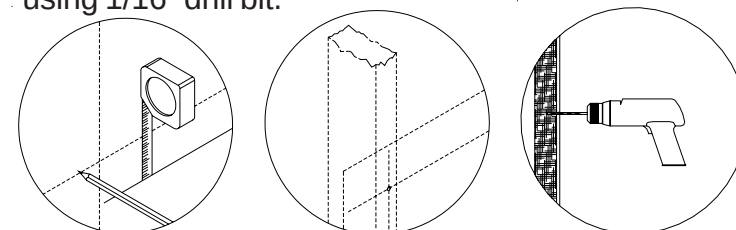


2 Attach Z-Hangers for mounting.

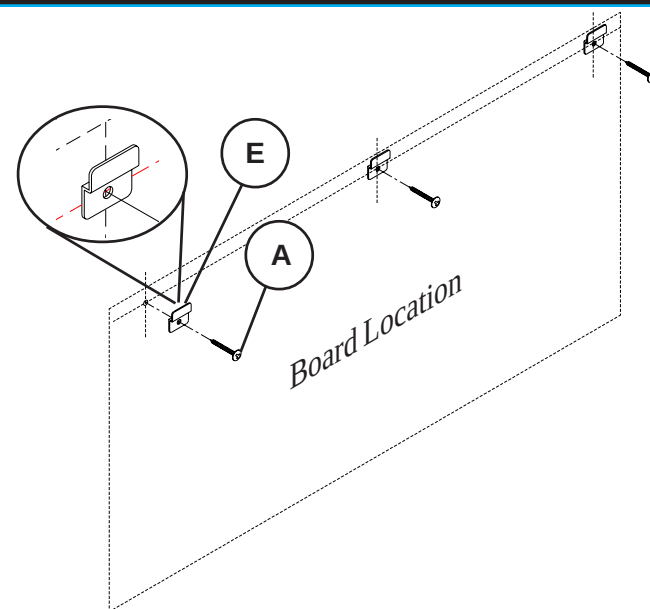


Attach 3 Z-Hangers (E) using 3 Long Screws (A) as shown.

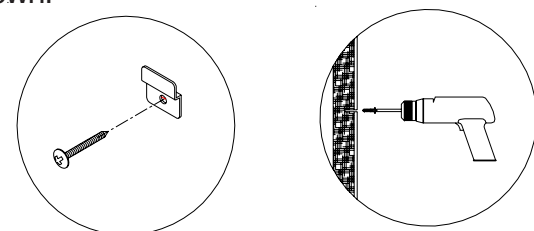


3 Hang board and mark bottom

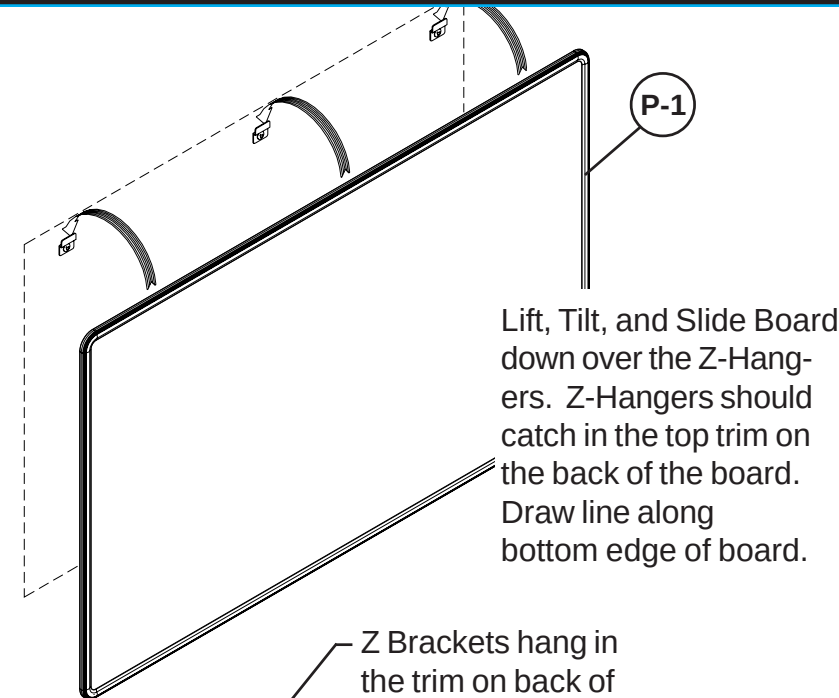


Lift, Tilt, and Slide Board down over the Z-Hangers. Z-Hangers should catch in the top trim on the back of the board. Draw line along bottom edge of board.

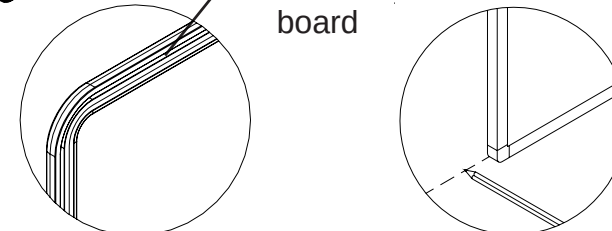


4 Remove board and drill

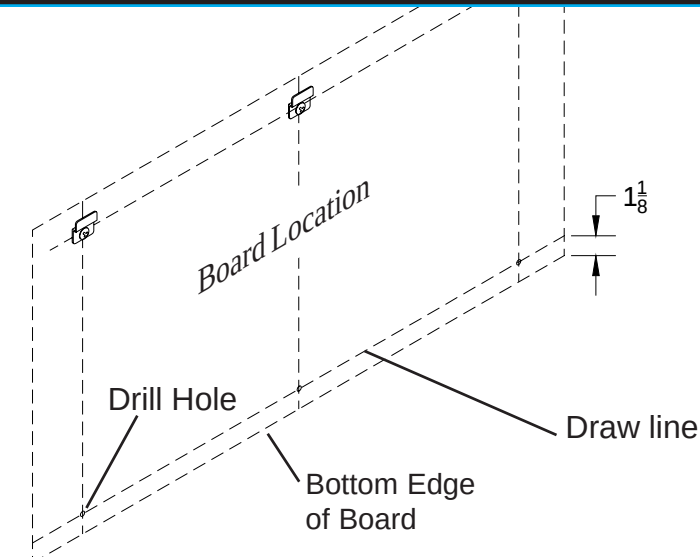


Lift and remove board from the Z-Hangers. Measure up from bottom line of board 1-1/8", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/16" drill bit.

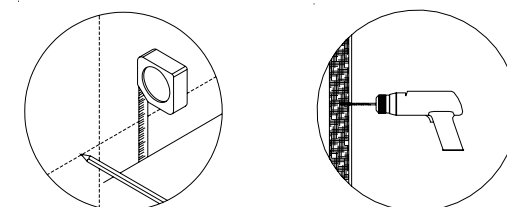


5 Attach Lower Brackets and Hang board

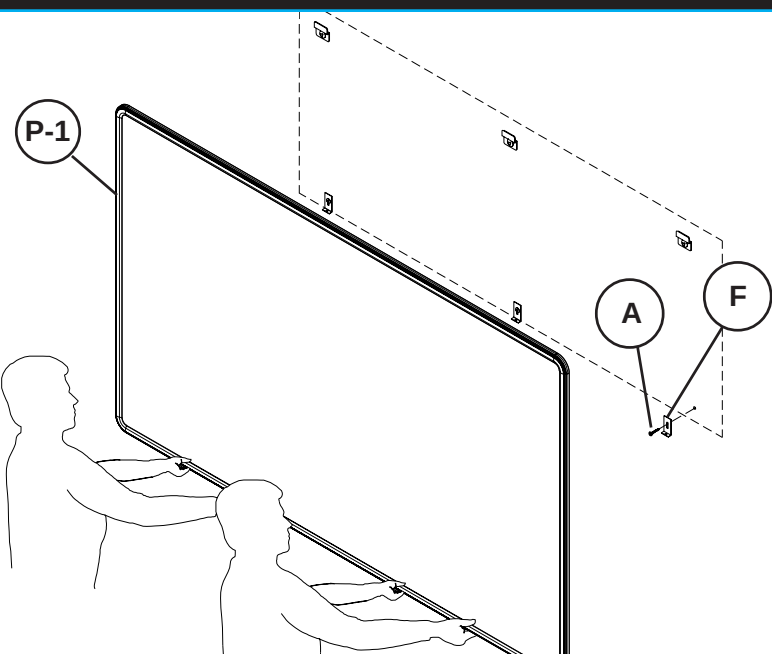


Secure 3 bottom brackets (F) to the wall using 3 long screws (A) as shown. Hang board on the Z-Hangers (E).

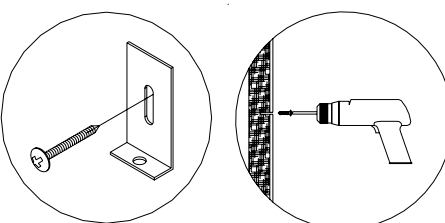

6 Secure Board & Attach Q-Tray

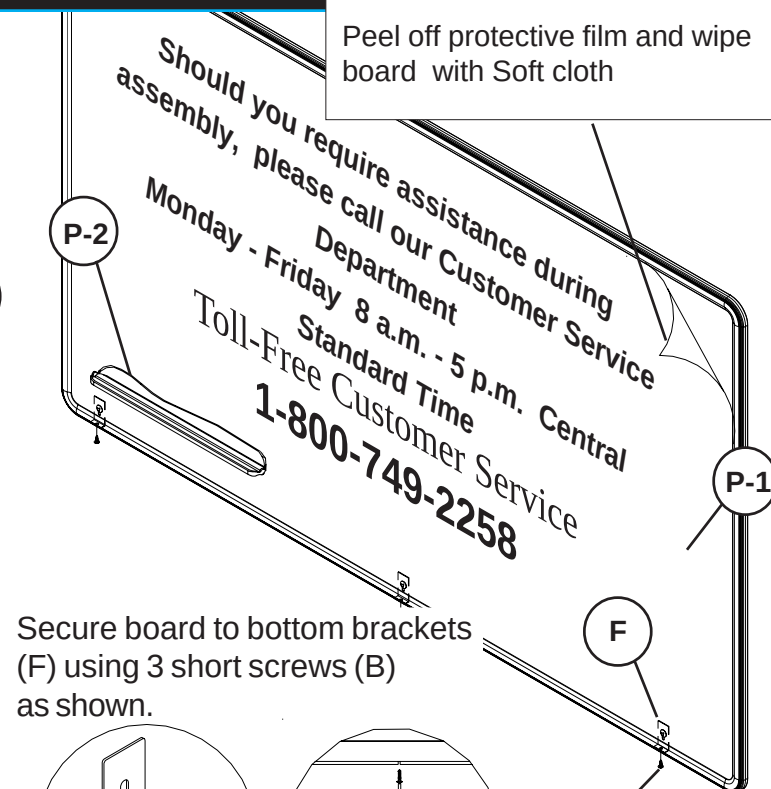

Secure board to bottom brackets (F) using 3 short screws (B) as shown.

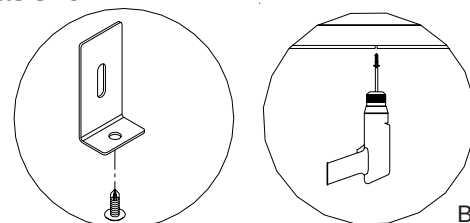

Peel off protective film and wipe board with Soft cloth

Should you require assistance during assembly, please call our Customer Service Department
Monday - Friday 8 a.m. - 5 p.m. Central
Standard Time
Toll-Free Customer Service
1-800-749-2258

BRT-219PG/PH_03/25/10

Parts List

P1		Board	1 EA
P2		Q-Tray	1 EA

Hardware List

A		Long Screw	6 EA
B		Short Screw	3 EA
C		Screw Anchor - Concrete (For Concrete walls)	6 EA
D		Screw Anchor - Drywall (For Drywall)	6 EA
E		Z Hanging Bracket	3 EA
F		Bottom Bracket	3 EA



BRT-219PG/219PH
4x6, 4x8 Magne-Rite
W/Satin Presidential Trim

