


Class 9049 Type A52 Mounting Bracket Kit for Class 9013 Type GHG/GSG Pressure Switches

INSTALLATION

NOTE: The bracket can be oriented with the angle up or down. Do not substitute screws that are longer than those supplied in this kit.

1. Remove the four screws from the flange.
2. Install the bracket using the 8-32 x 7/16" screw assemblies supplied with this kit.
3. Torque the flange screws to 10–18 lb-in.

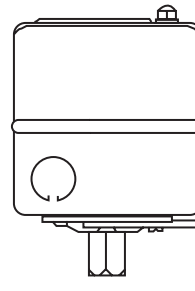

SQUARE D

65013-003-84A